

## 83-680 Removal and installation of double contact relay


---

### Removal

---

- 1 Remove glove box (68-140).
- 2 Unscrew double contact relay (18) from holder on evaporator housing and pull off electrical plug.

6 Amplifier  
18 Double contact relay

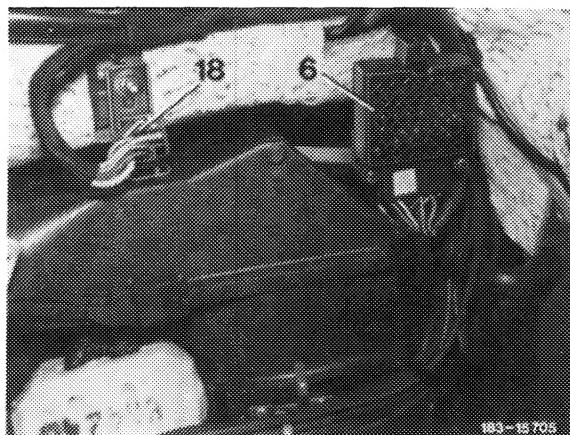

### Installation

---

- 3 Mount electrical plug on double contact relay (18) and screw relay to holder.
- 4 Install glove box (68-140).